

MANUAL

Digital Tyre Gauge

English

Range	0 – 100 PSI 0 – 7.0 BAR 0 – 7.0 Kgf/cm ² 0 – 700 kPa
Operation temperature	0 – 50 °C (23 – 122°F)
Storage temperature	-20 – 70°C (-4 – 158 °F)
Auto Off	after approx. 35 sec
Accuracy	± 1 %

Instructions

1. Press the “ON/UNIT/OFF” button. Wait 3 seconds for “0.0” PSI – Bar – Kgf/cm² - kPa display.
2. Quickly and firmly push the gauge’s nozzle onto your tyre valve. Make sure a good seal is made between the nozzle and valve system so that no hissing sound of escaping air is heard.
3. Hold gauge on valve system for 2 seconds.
4. Promptly remove gauge from valve system and read the pressure from LCD. At any time you can press “ON/UNIT/OFF” button to convert PSI or BAR or Kgf/cm² or kPa unit (PSI → BAR → Kgf/cm² → kPa).
5. Repeat above 1-4 for measuring other tyre pressure.
6. Auto Off function after approx. 35 sec.

Battery replacement

When the display becomes dim or is fading, replace the battery (1 x CR2032 or similar). Open the housing. Remove the old battery (protect the environment by taking empty batteries to authorized disposal stations). Insert the new one into the battery holder (with + side up) and close the housing.

