



# Memory Master

PROFESSIONAL STOPWATCH

*User manual*  
**ENGLISH**

*Thanks for choosing the professional stopwatch  
Memory Master with Lap and Split times  
measurement with 1/1000 second precision.  
To get the most out of your device read this manual  
carefully and keep it on hand for later reference.*

## **CONTENTS**

MODES.....	3
BUTTONS.....	4
TIME.....	5
ALARM.....	5
STOPWATCH.....	6
CHRONO DATA.....	7
COUNTDOWN.....	8
PACER.....	9
BATTERY REPLACEMENT.....	10
CARE AND MAINTENANCE.....	11
WARRANTY.....	12

## **MODES**

### **Time**

- Hour, minutes, seconds, date, day, month, year
- 12/24 hour format

### **Daily alarm**

### **Stopwatch**

- Lap and split times measurement
- 1/1000 second precision
- Pause function
- Total timing: 9 hours, 59 minutes, 59 seconds, 99 decimals

### **Chrono data**

Recall Lap and Split times of current session  
Fastest and slowest lap, average time, total time

### **Countdown**

- Programmable from 1 second to 10 hours
- 1/1000 second precision
- Repeats count up to 9999
- Acoustic signal

### **Pacer**

- Adjustable from 10 to 320 signals per minute
- Timing and count of signals

## BUTTONS



### **S1 - SPLIT**

- Mark Lap and Split times
- Reset stopwatch
- Browse chrono data

### **S2 - MODE**

- Browse functions in sequence:  
Time > Alarm (AL) > Stopwatch > Countdown (TR)  
> Pacer (Pace)

### **S3 - ST/SP**

- Start/pause/stop stopwatch
- Browse chrono data

### **S4 - SET/RECALL**

- Recall data of current session
- Enter settings mode
- Backlight display

## TIME

Press MODE button and enter Time mode.

### Setting

- Press SET/RECALL button. The year digit flashes.
- Press ST/SP to increase the value or SPLIT to decrease it.
- Press SET/RECALL to confirm and set month.
- Press ST/SP to increase the value or SPLIT to decrease it.
- Press SET/RECALL to confirm and set the next data.

Follow the procedure described above to set date, 12/24 hours format, hour and minutes.

Press MODE button to confirm and exit setting mode.

## ALARM

Press MODE button and enter Alarm mode (AL).

### Setting

- Press SET/RECALL to enter setting mode. The hour digit flashes.
- Press ST/SP to increase the value or SPLIT to decrease it.
- Press SET/RECALL to confirm and set minutes.
- Press ST/SP to increase the value or SPLIT to decrease it.
- Press SET/RECALL to confirm.
- Press ST/SP or SPLIT to activate (ON) or deactivate (OFF) the alarm.
- Press SET/RECALL to confirm and exit setting mode.

The alarm will beep for some seconds; press one of the buttons to turn it off.

## **STOPWATCH**

Press MODE button and enter Stopwatch mode.

- Press ST/SP to start the stopwatch.

- Press SPLIT to mark Lap/Split time.

The lower line shows the total elapsed time.

The middle line shows Split time and upper line shows Lap time.

The upper-left number indicates the total number of times marked.

- Press ST/SP to pause the stopwatch and press again to restart it.

- Press ST/SP and SPLIT to reset the stopwatch.

## CHRONO DATA

Data can be recalled and viewed during timing.

Press SET/RECALL to view data in sequence:

Lap/Split > fastest lap (FS) > slowest lap (SL) > average time (AV) > stopwatch

From Lap/Split data, press ST/SP or SPLIT button to browse stored times.

The upper-left number indicated the progressive number of times.

The upper line indicates Lap time, the middle line indicates Split time.

The display will show current timing in stopwatch mode if no buttons are pressed for some seconds.

Chrono data are automatically deleted when the stopwatch is reset.

## COUNTDOWN

Press MODE button and enter countdown mode (TR).

### Setting

- Press SET/RECALL to enter setting mode. Hour digit flashes.
- Press ST/SP to increase the value or SPLIT to decrease it.
- Press SET/RECALL button to confirm and set minutes.

Follow the procedure described above to set minutes and seconds.

- Press SET/RECALL button to confirm and exit setting mode.

### Start

- Press ST/SP to start the countdown.

The upper line shows time set, the middle line shows remaining time, the lower line shows the repeats count.

- Press ST/SP to pause and restart the countdown.

The device beeps when countdown reaches zero.

Press ST/SP and SPLIT to reset the stopwatch.

## **PACER**

Press MODE button and enter Pacer mode (PACE).

### **Setting**

- Press SET/RECALL to enter setting mode.
- The pace digit flashes (e.g. F-10).
- Press SPLIT or ST/SP to change the digit.
- Press MODE button to confirm.

### **Start**

- Press ST/SP to start the pacer.

The upper line shows elapsed time.

The middle line shows repeats count (C-).

The lower line shows the pace set (F-).

- Press ST/SP button to pause and restart the pacer.
- Press ST/SP and SPLIT to stop and reset the count.

## BATTERY REPLACEMENT

- Unscrew battery hatch by rotating it anticlockwise with the help of a coin.
- Remove the exhausted battery and replace it with a new one.
- Do not remove the rubber ring from its place.
- Reposition the battery hatch and screw it on by rotating clockwise.
- Battery type: CR2032 (3V).
- Use battery type as indicated on this manual and supplied with the device.
- Do not remove the rubber ring from its place.
- Do not dispose of batteries in regular household waste.
- Batteries have to be properly disposed of according to current local regulations.

## CARE AND MAINTENANCE

- Do not attempt to disassemble or repair the device.
- Protect from extreme heat or cold temperatures, shocks and long time exposure to direct sunlight.  
Store in a cool and dry place.
- Wipe clean with a lightly moistened cloth. Apply mild soap to the area in case of stubborn stains or marks. Do not expose your device to strong chemicals such as gasoline, clean solvents, acetone, alcohol, as they may damage the unit's seal, case and finish.
- Avoid direct contact with hairstyling products, insect repellents, colognes, sunscreen lotions and other toiletries which can deteriorate the plastic parts. In case, wipe the device off with a dry and soft cloth immediately.
- Avoid contact with water and do not handle the device with wet hands.
- Do not press buttons and keys in case of contact with water.
- The device and its components have to be properly disposed of according to current local regulations.

## WARRANTY

- The warranty applies for 24 months from purchase date and is limited to material and processing faults only.
- The warranty applies only if the product and the accessories have been handled carefully and according to instruction.
- The warranty does not cover damage due to misuse or non-compliance with care and maintenance indications.
- Batteries are not covered by the warranty.
- In case of any warranty claim, please refer to your dealer or send the product, accessories and dated purchase bill to your country Distributor.
- Before sending the device, read the user manual carefully and check the battery charge.
- In case of valid warranty claim, the repaired device or a replacement device will be returned free of charge.
- For out-of-warranty assistance, refer to your dealer or send the device to your country Distributor.

